


Pocket Specification Sheet

PAC-BARRIER™
Portable - Adjustable - Convenient

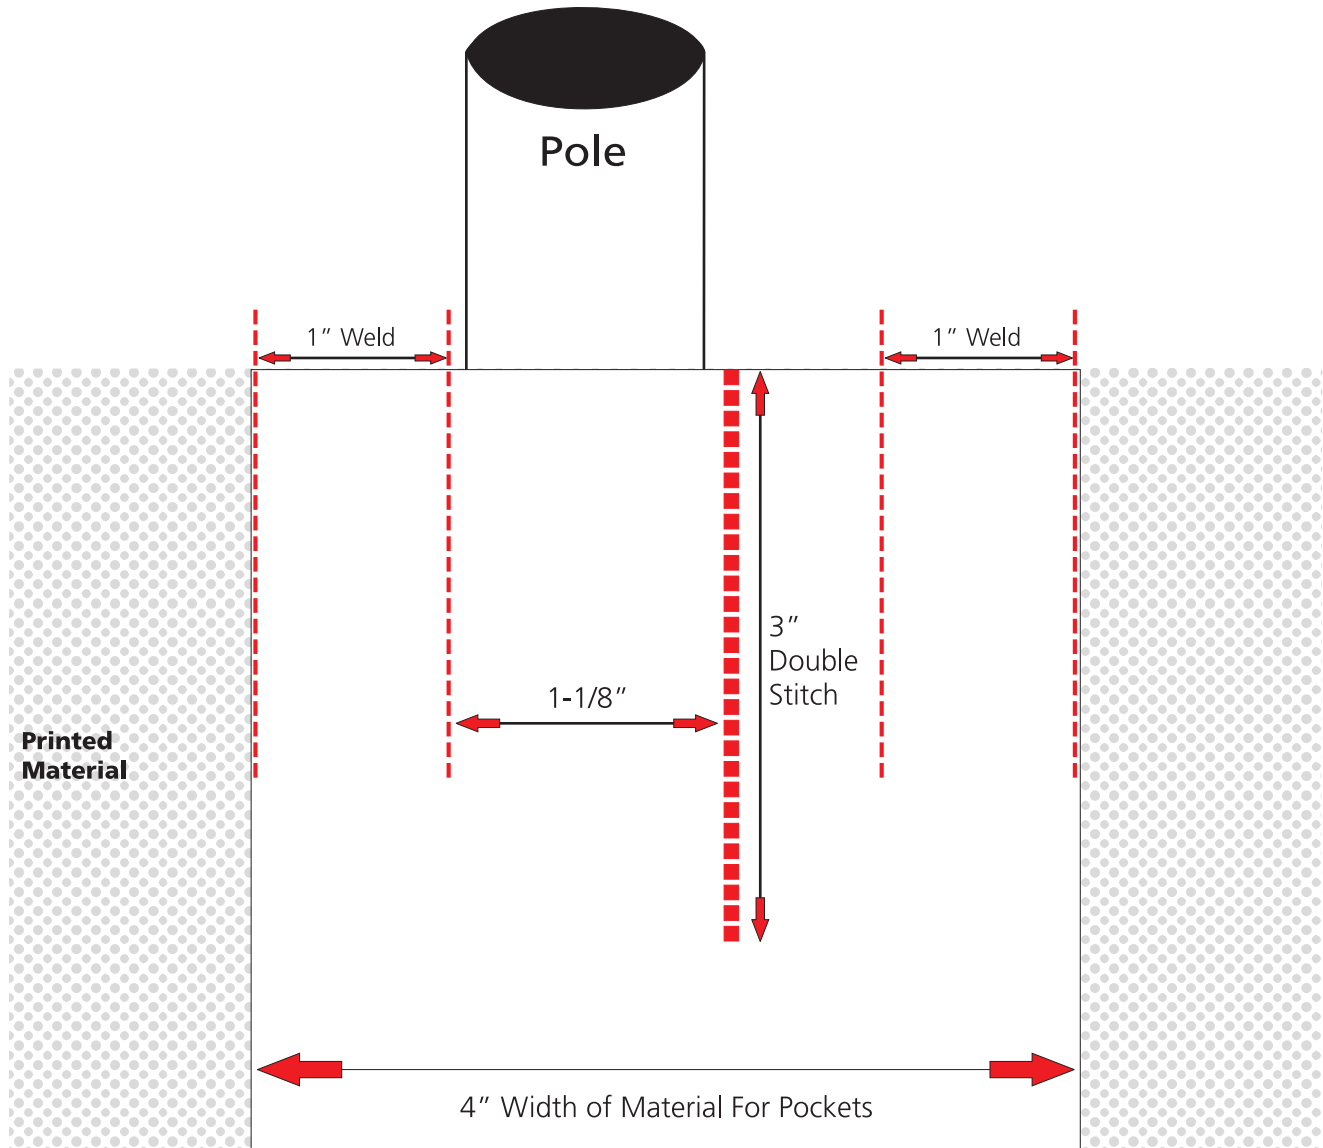

- Step 1: Print selected banner length
- Step 2: Print pockets separately with bleeds
- Step 3: Trim down pockets to 4" in width and 32" in length
- Step 4: Pocket material must be flush with the top of full length of selected banner material,
Weld a 1" width on each side of the pocket vertically down full length of the pocket
- Step 5: End pocket is simply a fold and a single weld with a 3" vertical stitch
- Step 5: Test strength to ensure that it will not peel off
- Step 6: Measure 1-1/8" width from one side of weld and double stitch a 3" seam from the top of the pocket vertically down
- Step 7: Cut access thread off
- Step 8: Cut out a notch at bottom of pocket for easy pole insertion

BRT SYSTEMS INC.

BRT Systems Inc.
10004 79th Ave.
Edmonton, Alberta. T6E 1R5

www.pacbarrier.com

Phone: (780) 437-3614
Fax: (780) 435-3950
Toll Free: 1-866-623-3826